

WOODFIRED HOT TUB HEATER#

- Before first use you should thoroughly flush the stove with plenty of water, also by letting the water to the upper spiral pipe, so that any remaining fabrication of metal is coming out of the heater.
- Water is self-circulating between the hot tub and the heater. Hot water rises and creates low pressure, which sucks the water from below through the spiral pipe. Second part of the chimney is protected with a hat, so it is not possible for the rain to fall inside the heater. The heater is connected to a hot tub wall with stainless steel bolts.
- Install the heater 2-2.5 cm above the top of the barrel so that water does not enter inside the heater. Drill holes for bolts through the barrel wall (first mark with a pencil the places ready) and attach the heater, you can use silicone between the bolt and the wall. Bolt goes from the outside to inwards.



- Please be careful with the heater, because there might be some sharp edges (example mounting ears, stove pipe hat etc)
- The temperature for bathing in the barrel is at its best at 36-37 degrees centigrade. The heating process depends from the start temperature of the water, quality of the firewood and the weather. We recommend using dry birch wood but normal mixed wood goes as well. Adjusting the temperature is done by having just the right kind of fire in the heater. Remember that this amount of water takes some time to change its temperature. So when it is getting close to the wanted temperature you should slow down the burning. After a few uses you will learn how to maintain the right temperature.




- Check the metal air intake is inside a heater on the right side, opposite the chimney (pictures above).
- It is easy to use the heater, first add some paper and wood to the firebox and light the wood. Be aware that when the fire is burning, the heater and pipe will get very hot. Danger of getting burned!

WOODFIRED HOT TUB HEATER#

- In contact with fire, such as adding wood to the heater, it is not permitted to use clothing that are made of combustible materials (sleeves, gloves, etc.) or bare hands. For the maximum protection, fire resistant clothing (including gloves) should be used.
- The heater **MUST NOT** be used when the tub is empty or contains insufficient water. The minimum fillage is 10cm above the top of heaters horizontal part (see the picture below)!

Heater 3M or 6M

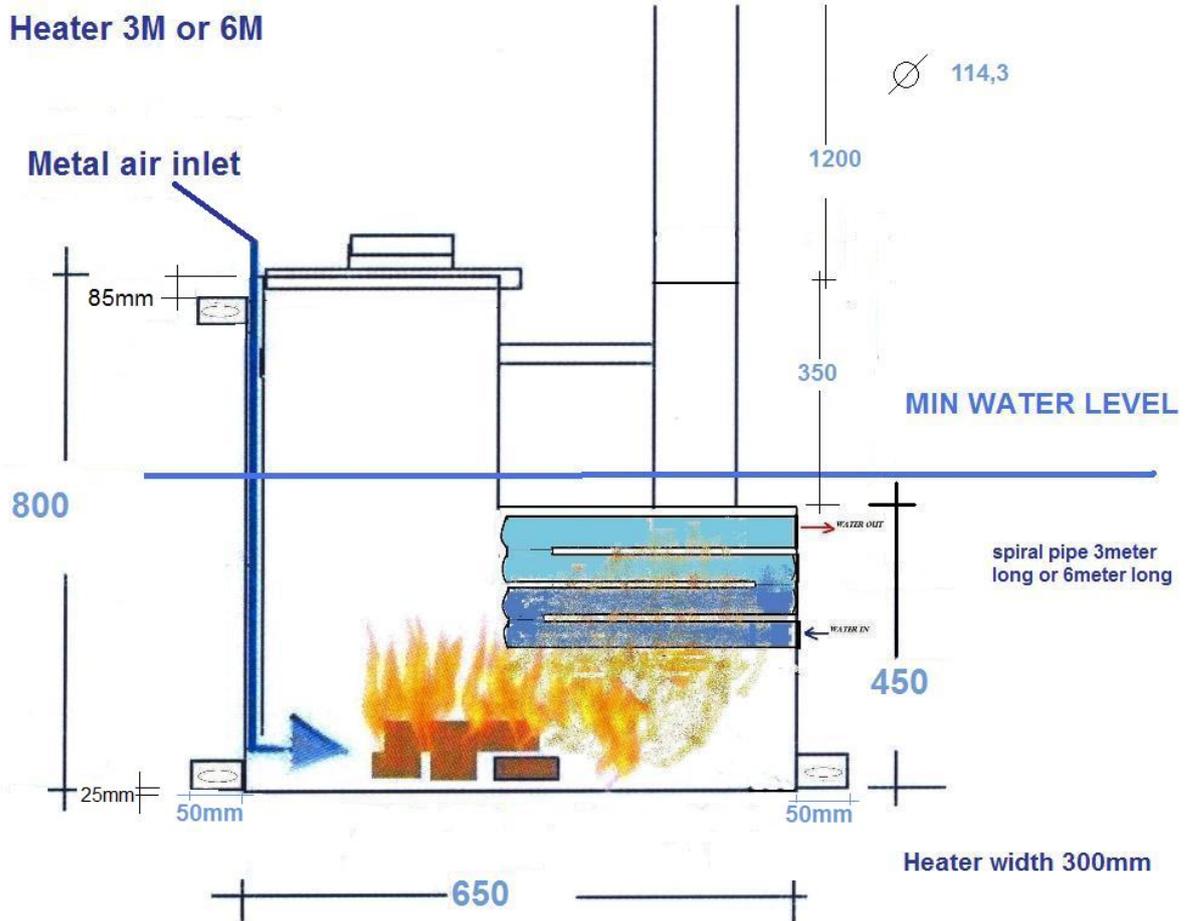

- Never empty the pool without having first put out the heating stove.
- When cold water is heated, the water at the bottom of the pool may still be slightly cooler. Stir the water using a board or similar to mix it.
- If there is a risk of a big freeze, you should heat or empty the pool.
- The amount of water needed is less than given volumes, since people take up space in the tub.
- It is important to clean the heater with ash-shovel after several uses, this way draught is better.
- Pregnant women and people suffering from problems with the heart or circulation should contact their doctor.

HOT TUB HOOPS (if ordered)

- Be careful with the hot tub hoops, the material is sharp and when dealing with them, you should use thick material gloves (for example thick leather gloves).

Have a nice bath!